 
 





564 Series Outdoor Ceiling Mount GU Porch Fixtures Installation Instructions

56400WPCGU
Outdoor Ceiling Fixture with
White Finish and White Diffuser

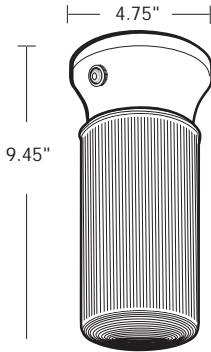



Hardware Kit

 Height-9.45"
Width-4.75"
Depth-4.75"

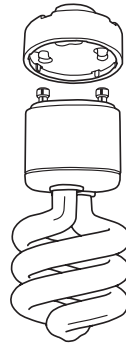

GU24 Lamp

  56400BPCGU
Outdoor Ceiling Fixture with
Black Finish and White Diffuser

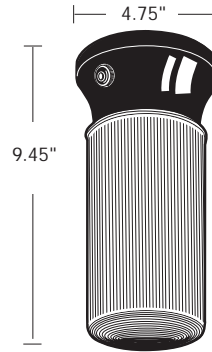

Hardware Kit

Height-9.45"
Width-4.75"
Depth-4.75"



WARNINGS AND CAUTIONS

WARNING

- Shut off power at the circuit breaker or fuse panel before removing the old fixture.

CAUTION

- **DO NOT USE THIS FIXTURE WITH A DIMMING CIRCUIT.** If you presently have dimmer controls, you will need to remove them, and replace them with regular electrical switches. If you have a three way dimmer, you will have to replace it with a regular three way switch. If you are unfamiliar with electrical installations, we recommend you have a qualified electrician do your installation.

CARE AND MAINTENANCE

Your fixture is made from quality materials that will last for many, many years with minimum care. You may want to periodically clean the fixture using a mild, non-abrasive cleaner and soft cloth. Do NOT use solvents or cleaners containing abrasive agents. When cleaning the fixture, make sure you have the power turned off and do not spray liquid cleaner directly onto the bulb, socket, ballast, or wiring.

LIMITED WARRANTY

This TCP product is warranted for a period of two years from date of original purchase against defects in materials and workmanship. If this product should fail to operate due to defects in materials or workmanship, simply return this product to the place of purchase or call TCP service center at 1-800-324-1496, along with the original sales receipt within two years of purchase. This product will be repaired or replaced, at TCP's option. This warranty is expressly limited to repair or replacement of the product. This warranty gives the consumer specific legal rights, which vary from state to state. Light bulbs are not covered under this warranty. WARRANTY IS VOID IF PRODUCT IS NOT USED FOR THE PURPOSE FOR WHICH THIS PRODUCT IS MANUFACTURED.



564 Series Outdoor Ceiling Mount GU Porch Fixtures Installation Instructions

Fixture Installation

- 1 Turn off electricity at circuit breaker box before proceeding
- 2 Unscrew diffuser from fixture body
- 3 Remove lamp from porch fixture.
- 4 Attach the metal strap to the junction box using the two screws provided.
- 5 Match up the white and black wires from the fixture to the black and white (common) wire in the junction box using provided wire nuts. Tuck the wires into the junction box.
- 6 Screw the 2 1/2" screws into the small threaded holes on the metal strap. Position the fixture base over the electrical box so that the machine screws protruding from the electrical box pass through the elongated keyholes in the fixture's pan. Once both screws are through the keyholes, twist the pan until both screws are up against the smaller end of the slot. Hold in place and tighten the screws very tightly. Make sure input wires are not pinched.
- 7 Remove the bubble wrap from around the bulb and insert the proper GU24 base fluorescent lamp into the socket. Hold the lamp by the base, insert the two pins into the two curved slots in the socket and twist clockwise until the bulb "seats." CAUTION: DO NOT HOLD THE LAMP BY THE GLASS DURING INSERTION OR REMOVAL TO PREVENT ACCIDENTAL BREAKAGE.
- 8 Reapply the fixture's cover
- 9 Restore power to the electrical box.

Replacement Parts:

Black Ceiling Mount Porch Body w/ lens, no lamp:
564BPCGU



White Ceiling Mount Porch Body w/ lens, no lamp:
564BPCGU

Replacement Lamps:

Fixture	Replacement Lamp
56413BPCGU, 56413WPCGU	33113SP
56418BPCGU, 56418WPCGU	33118SP
56423BPCGU, 56423WPCGU	33123SP

Bulb Replacement Instructions

  Your bulb should last up to 10,000 hours in normal use. When bulb replacement is necessary, you must replace the bulb with a self-ballasted GU24 base fluorescent bulb. These bulbs are readily available at your local home center and most larger hardware stores.

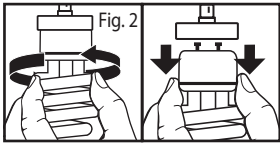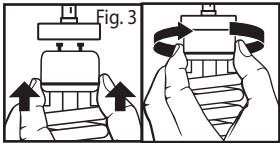- 1 Shut off power supply. Allow sufficient time for bulbs to cool properly before handling.
- 2 Remove the fixture's diffuser by unscrewing it.
- 3  Remove the old bulb by grasping it firmly at the plastic base of the bulb and firmly twist the bulb counter-clockwise until it "unseats" and lines up with the large end of the openings (Fig. 2). Pull straight down. Be careful not to drop the bulb.
- 4  Grasp the replacement bulb in the same manner and re-insert the replacement bulb into the socket and twist the bulb clockwise until it 'seats' (Fig. 3). Do not force the bulb into the socket or twist forcefully.
- 5 Reapply the fixture's cover.
- 6 Restore power to the fixture.

Troubleshooting Guide

Minor problems often can be fixed without the help of an electrician. Before doing any work on the fixture, shut off power supply at the circuit breaker panel to avoid electrical shock.

Problem	Cause	Solution
Fixture doesn't light	Bulb is defective Power is off	Replace bulb Check if power supply is on
	Bad wire connection Bad switch	Check wiring Test or replace switch
Fuse blows or circuit breaker trips when light is turned on	Crossed wires or power wire is grounded out	Check wiring connections
Light bulb flickers	Light is being reflected back to the sensor	Attach rubber sensor hood over top of light sensor

Minor problems often can be fixed without the help of an electrician. Before doing any work on the fixture, shut off power supply at the circuit breaker panel to avoid electrical shock.