




LED T8 LAMP INSTALLATION INSTRUCTIONS

Direct8
LED




LED
we know light.™


Installation Guide

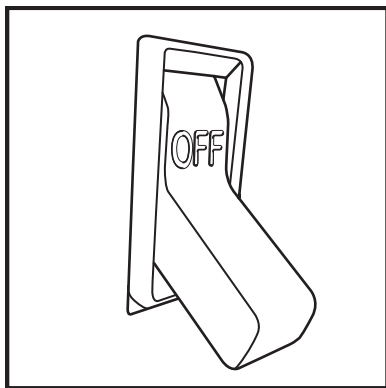


Switch Power **OFF**

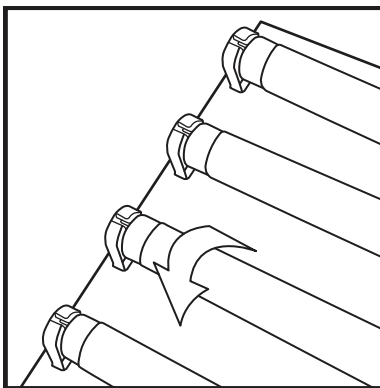


Twist fluorescent tube until slots are visible

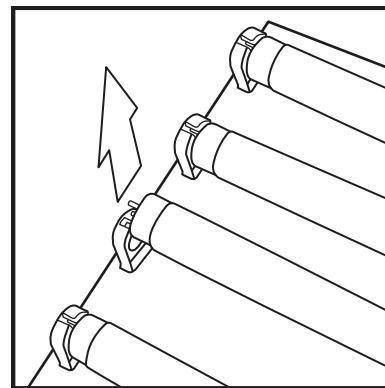


Pull fluorescent out

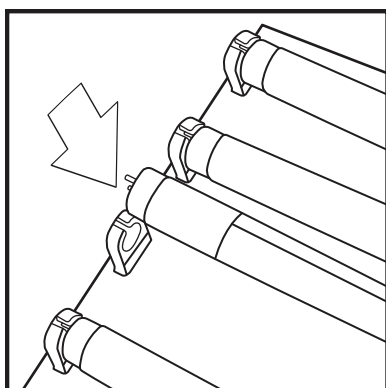

Line both ends of T8 lamp into slots

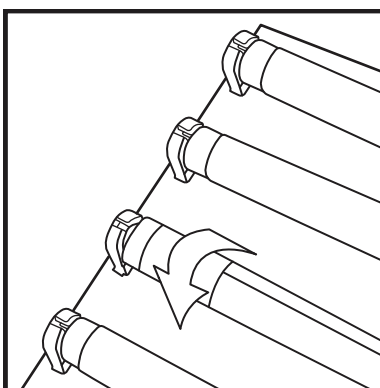

Twist T8 lamp to secure until resistance is met. Make sure light emitting side is facing out. Replace all lamps.

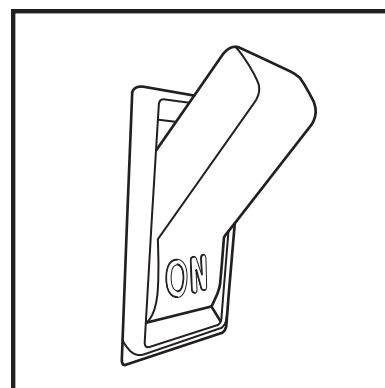

Switch Power **On**

Instructions

1. Switch off power to the luminaire.
2. If luminaire is equipped with a diffuser, remove at this time.
3. Verify that the tube being removed is compatible with the T8 lamp.
Twist the tube and pull down to remove tube.
4. Line up T8 lamp ends in slots, and twist lamp to secure. Repeat with all tubes to be replaced.
5. Replace diffuser.
6. Switch on power to test.

CAUTION - IF THE LAMP OR LUMINAIRE EXHIBITS UNDESIRABLE OPERATION (BUZZING, FLICKERING, ETC.), IMMEDIATELY TURN OFF POWER, REMOVE LAMP FROM LUMINAIRE AND CONTACT MANUFACTURER.

THIS LAMP ONLY OPERATES ON ELECTRONIC BALLASTS. IF LAMP DOES NOT LIGHT WHEN THE LUMINAIRE IS ENERGIZED, REMOVE LAMP FROM LUMINAIRE AND CONTACT LAMP MANUFACTURER OR QUALIFIED ELECTRICIAN.



325 Campus Drive
Aurora, Ohio 44202
P:800.324.1496
tcp.com

LED
we know light.™