

The TCP SmartBox is a Bluetooth[®] Signal Mesh based lighting control device. Once connected to a luminaire, the SmartBox can be configured through the TCP SmartStuff App on any Android[™] or Apple[®] Smart devices. Through the SmartStuff App, a luminaire can be directly controlled by the SmartBox or programmed to function automatically through a variety of control schemes.

Reasons to choose the TCP SmartBox Lighting Controls

- TCP's Bluetooth Signal Mesh SmartBox allows for over 100 TCP SmartStuff devices on one network
- Able to create scenes, schedules, and group TCP SmartStuff devices together
- Pair with the TCP SmartStuff Accessories for greater control and flexibility

Ideal Luminaire Applications

Linear High BaysLinear Low Bays

Flat PanelsTroffers

- Control luminaries with 0-10V dim to off drivers/ballast
- Easy to install, setup and configure through the TCP SmartStuff App
- All TCP SmartStuff products' firmware can be updated through the SmartStuff App to enhance their capabilities and fix potential issues
 - General Purpose Strips
 - Commercial Downlights

See the TCP Luminaire Family Compatibility List to see which luminaires are compatible with the SmartBox.

Specifications:

Input Voltage	120 - 277VAC @ 15mA
Input Line Frequency	50/60Hz
Maximum Power	1W
Output Voltage	0-10VDC
Operating Temperature2	3°F(-30°C) to 113°F(45°C)

Regulatory Approvals

- ETL Listed
- Contains FCC ID: NIR-MESH8269
- Contains IC: 9486A-MESH8269

- Conforms to UL 8750
- Certified to CSA C22.2 No. 250.13






SmartStuff SmartBox

Item Number: SMBOXBT

Dimensions

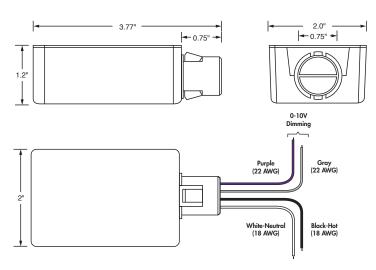

TCP SmartStuff App

The TCP SmartStuff App is used to configure the Bluetooth® Signal Mesh and TCP SmartStuff devices. Download the TCP SmartStuff App from the following options:


- Download the SmartStuff App from the Apple App Store[®] or Google Play Store[™]
- Use the QR Codes here:




Instructions for configuring TCP Smart App and SmartStuff devices are at https://www.tcpi.com/tcp-smartstuff/

Installation Notes:

Installation of the SmartBox

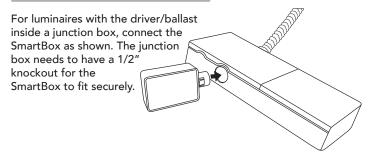

Electrical Connections

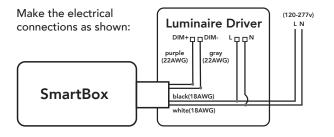

Resetting the SmartBox

To reset the SmartBox that is connected to a luminaire, perform the following steps below:

- 1. Turn the luminaire on and pause for 3 seconds.
- 2. Turn the luminaire off and pause for 3 seconds.
- 3. Repeat steps 1 and 2 five times.
- 4. Turn on the luminaire. After 6 seconds, the luminaire will flicker 5 times and then stay on.

The "Android" name, the Android logo, Google Play and the Google Play logo are trademarks of Google LLC.Apple, the Apple logo, and the App Store are trademarks of Apple Inc., registered in the U.S. and other countries. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by TCP is under license.



TECHNOLOGY CAST IN A BEAUTIFUL LIGHT

For over 20 years, TCP has been designing, developing and delivering energy-efficient lighting into the market. Thanks to our cutting-edge technology and manufacturing expertise, we have shipped billions of high quality lighting products. With TCP, you can count on a lighting product that is designed to meet the needs of the market - that transforms your surroundings and envelopes you in warmth - lighting that generates beauty with every flip of the switch.

Sales:	Catalog Number:
Date:	Туре:
Model:	Notes:
Project:	TCD
Rep:	we know light."

For more information on the quality and care TCP can deliver, call us at 800.324.1496 or visit tcpi.com